

Algo 8201 SIP Intercom Device Registration with CUCM 12.0


Configurations in CUCM

For registering Algo 8201 SIP Intercom in Cisco Unified Communications Manager configure:


- 1. End User in CUCM
- 2. Add a new Phone and associate with the end user created.
- 3. Provide the end user details in Algo 8201 SIP Intercom web page.

Configuration of End user in CUCM


Navigation: User Management >> End User

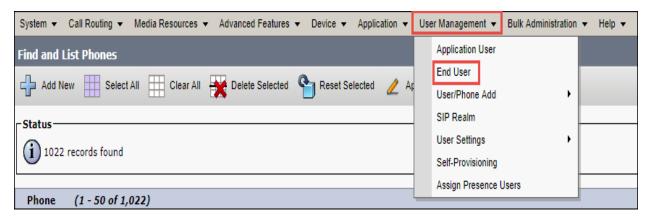


1. Select Add New

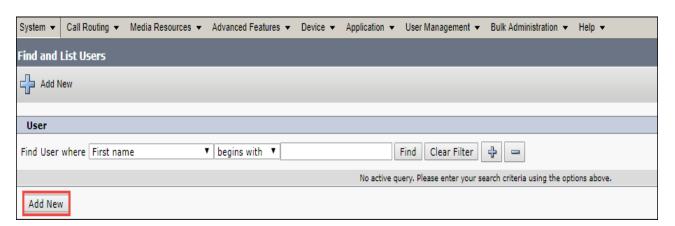

- 2. User ID: 7002 (which is used in this example)
- 3. Password: <Password>
- 4. PIN: <PIN>5. Last Name: User

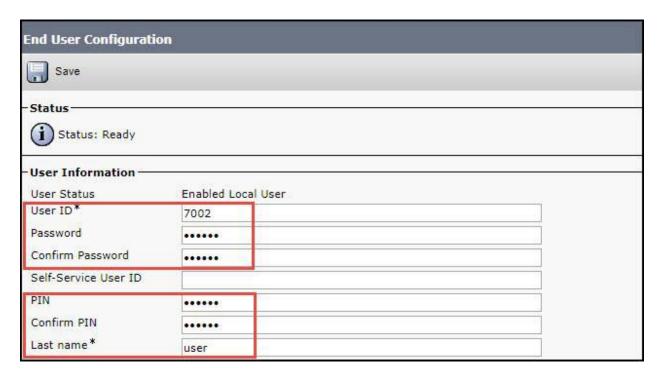

- 6 Digest Credentials: 123456 is used in this example.
- 7 Confirm Digest Credentials: 123456 is used in this example.
- 8 Save the configuration.

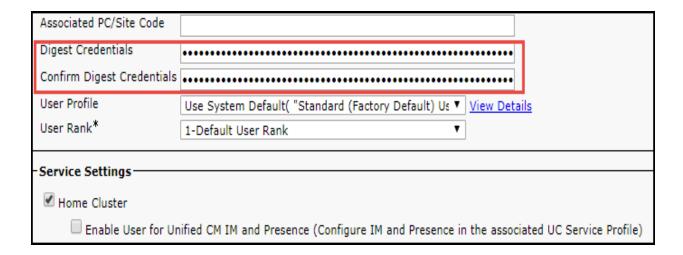

Configuration of Third-party client

The following procedure describes the configuration of third-party client on CUCM.


Navigation: Device >> Phone



Select "Add new"




In "Add a New Phone" page, Select Phone type as Third-party SIP Device (Advance).

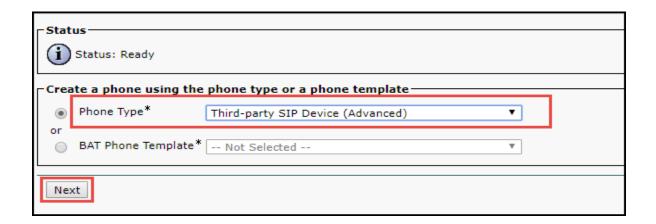


Enter the following details in "Phone Configuration" page:


- 1. MAC Address: 123456ABCDEF (used as an example)
- 2. Device Pool: Select Default.
- 3. Phone Button Template: Third-party SIP Device (Basic).
- 4. Owner: Select User
- 5. Owner User ID: 7002 (Select corresponding End User created)

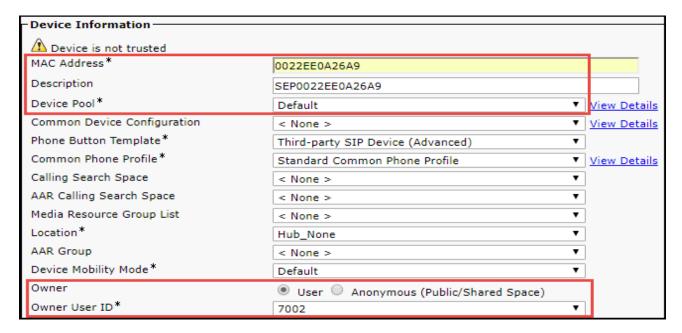


- 6 Device Security Profile: Third-party SIP Device Basic Standard SIP Non-Secure Profile
- 7 SIP Profile: Select Standard SIP Profile.
- 8 **DIGEST User**: Select the End user created.

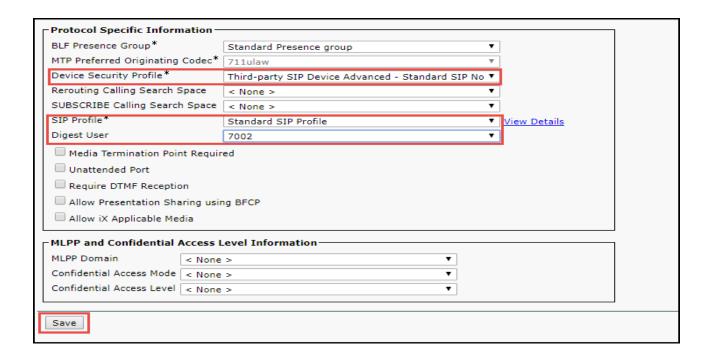

- 9 Save the Configuration.
- 10 Configuring Directory Number by Selecting the Line under "Association" and provide the Directory Number for both page and ring extension.

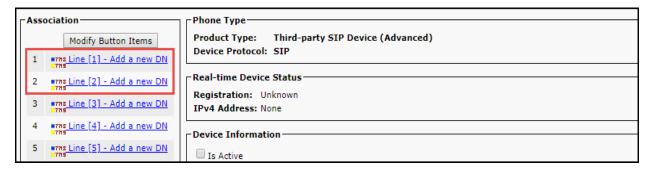


11 Give the directory number for page extension as 7002 as an example

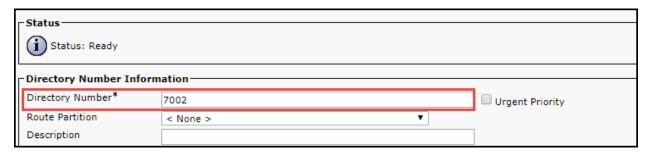

Also associate the End user to the Line




Select the associated end user

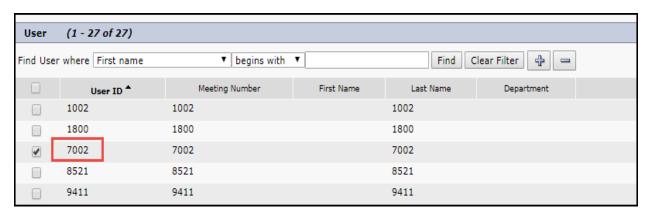


Algo 8201 SIP Intercom Configuration

Enter the application webpage (using device ip address) using default password

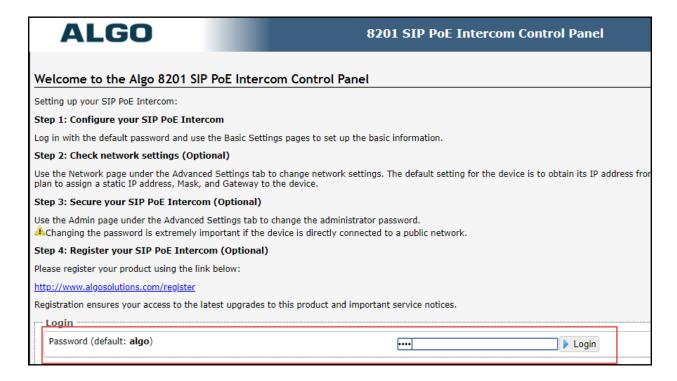

- 1. Enter SIP domain: CUCM IP address with the port number
- 2. SIP extension: sip extension dn
- 3. Authentication ID: End user authentication
- 4. Authentication password: End User pin
- 5. Extension to dial: any extension dn to be dialed when intercom button is pressed

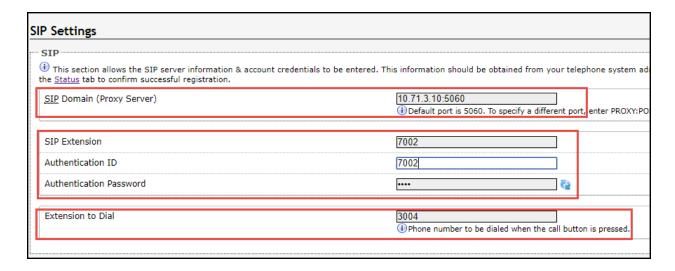

Click Save to save the configurations.

Check the status on the webpage after the configuration.



The SIP intercom is successfully registered.